

We recommend square stopping gib at lintel as Gib Cove can interfere with spring/automatic fixing. If Gib Cove used it may require notching out which can look untidy.

PLEASE ENSURE GARAGE FLOOR IS CLEAR OF OBSTRUCTION BEFORE INSTALLER ARRIVES